


Instrukcja obsługi

.....

Bezdotykowy kosz na śmieci

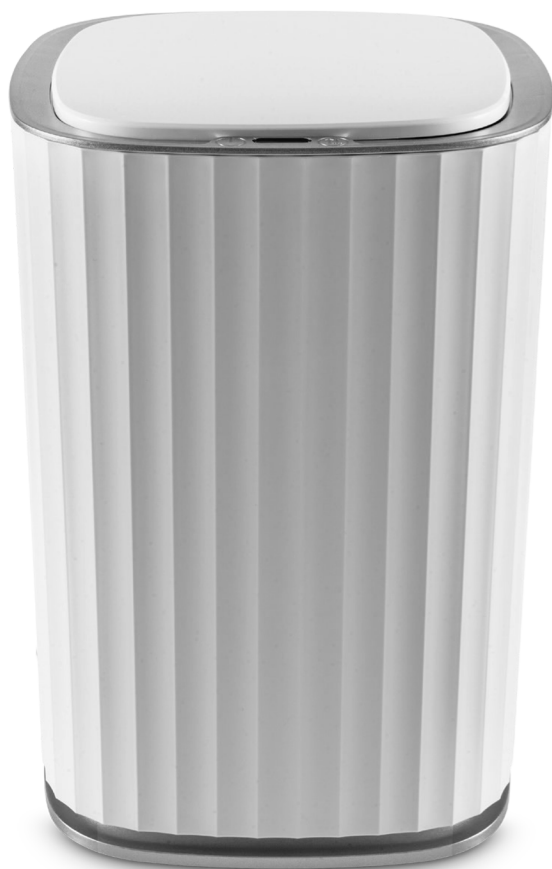

VK-215

.....

Należy dokładnie zapoznać się z treścią niniejszej instrukcji,
przed rozpoczęciem użytkowania urządzenia.

OBSŁUGA URZĄDZENIA


1. Zakładanie worka na odpady.

Najpierw wyjmij pierścień dociskowy, następnie załóż worek na śmieci na uchwyt, umieść go w koszu i na koniec przykryj pokrywą.



2. Wkładanie baterii.

Otwórz klapy zabezpieczającą komorę na baterie. Włóż dwie baterie typu AA zgodnie z oznaczeniami + / -. Zamknij klapy zabezpieczającą komorę na baterie.

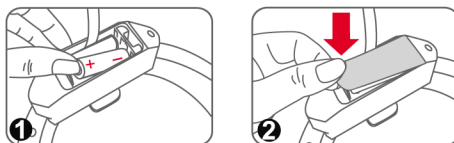

3. Włączanie czujnika ruchu

Kosz włączy się automatycznie po zbliżeniu dowolnej części ciała do czujnika ruchu.



4. Otwieranie kosza za pomocą czujnika ruchu.

Umieść dowolną część ciała 15-25 centymetrów nad czarnym obszarem czujnika, a pokrywa otworzy się automatycznie. Po opuszczeniu obszaru czujnika pokrywa zamknie się automatycznie po około 5 sekundach.



5. Manualne otwieranie kosza.

Delikatnie naciśnij przycisk po prawej stronie pokrywy, aby pozostawić ją otwartą na dłużej. Naciśnij przycisk ponownie, aby zamknąć pokrywę.



6. Odporność na zachlapania

Technologia wodoodporności IPX5 zapobiega uszkodzeniu urządzenia przez wodę lub wilgotne środowisko. Po splukaniu nie pozostawia śladów wody na powierzchni.



ROZWIĄZYWANIE PROBLEMÓW

Model	Przyczyna	Rozwiązanie
Automatyczna klapka nie podnosi się lub nie zamyka się	- Czujnik ruchu może być zabrudzony - Zawieszenie czujnika ruchu - Słabe baterie	- Należy wyczyścić czujnik ruchu za pomocą suchej szmatki - Wciśnij przycisk Open/Close w celu zresetowania urządzenia - Wymień baterie
Automatyczna klapka otwiera się bardzo powoli	- Słabe baterie	- Wymień baterie

SPECYFIKACJA

Kosz z czujnikiem ruchu VK-215

Pojemność kosza: 15 L

Zasilanie: 2 x bateria AA (nie dołączona do urządzenia)

Wymiary: 230 x 230 x 320 mm

Masa: 0,93 kg

W przypadku wszelkich problemów z urządzeniem lub wątpliwości związanych z jego użytkowaniem, skontaktuj się ze swoim sprzedawcą lub z autoryzowanym serwisem.

Nigdy nie próbuj samodzielnie naprawiać urządzenia. Wszelkie próby samodzielnej naprawy będą skutkowały utratą gwarancji. W przypadku zgłoszenia reklamacyjnego konieczne będzie okazanie dowodu zakupu niniejszego urządzenia.

Prawidłowe utylizowanie sprzętu elektrycznego i elektronicznego




Dany symbol umieszczony na produktach lub dołączonej do nich dokumentacji informuje, że zużytego sprzętu elektrycznego lub elektronicznego nie wolno wyrzucać razem z innymi odpadami gospodarczymi. Prawidłowe postępowanie polega na nieodpłatnym przekazaniu zużytego sprzętu do wyspecjalizowanych punktów zbiórki. W niektórych krajach zużyty sprzęt można przekazać sprzedawcy podczas zakupu innego urządzenia. Prawidłowe postępowanie ze zużytym sprzętem umożliwia zachowanie cennych zasobów oraz uniknięcie negatywnego wpływu na środowisko i zdrowie ludzi. Szczegółowe informacje o najbliższych punktach zbiórki można uzyskać od sprzedawcy lub władz lokalnych. Nieprawidłowa utylizacja odpadów zagrożona jest karami przewidzianymi w stosownych przepisach. Powyższy symbol jest ważny tylko w krajach UE, w razie konieczności pozbycia się zużytego sprzętu poza granicami UE, proszę skontaktować się ze sprzedawcą lub władzami lokalnymi, celem uzyskania informacji o prawidłowym sposobie postępowania.

Wyprodukowano w CHRL dla Verotech Sp. z o.o., ul. Szyszkowa 35/37, 02-285 Warszawa

User manual

.....
Sensor waste bin

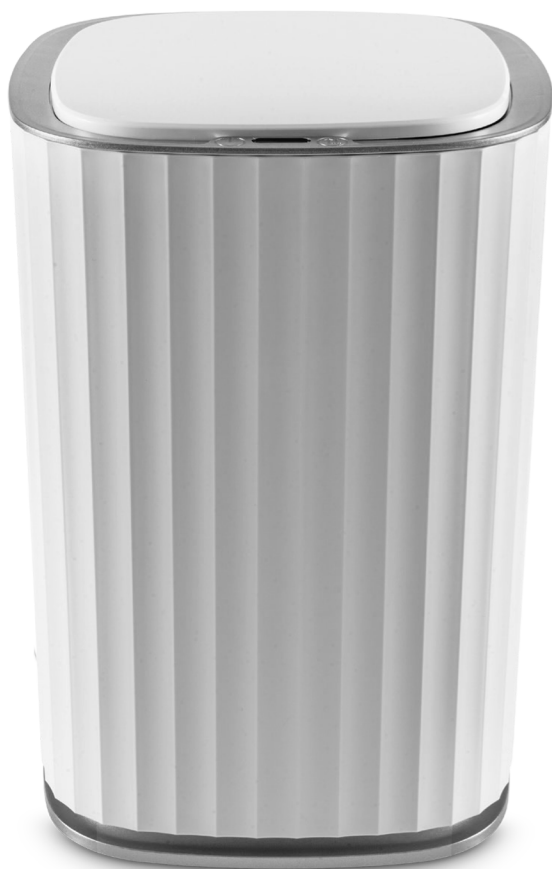

VK-215

.....
Please read these operating instructions before using the unit

QUICK START GUIDE


1. Insert trash bag.

First, take out the pressing ring, then put the trash bag over the bag holder, place it inside the bin, and finally cover it with the lid..



2. Insert batteries.

Take out the bucket lid and turn it over to the back. Find the battery box and open the lid. Put the dry batteries into the battery compartment according to the positive and negative pole indications, and finally close the battery lid tightly.

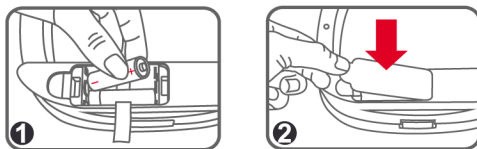

3. Turn on the product

Product turns on automatically when movement is detected by sensor.



4. Sensor lid opening function.

Place any part of your body 15-25 centimeters above the black sensor area, and the lid will open automatically. After leaving the sensing area, the lid will close automatically in about 5 seconds.



5. Button lid opening function.

Lightly touch the button on the right side of the lid to keep it open for an extended time. Press the button again to close the lid.



6. Waterproof

IPX5 waterproof technology prevents water or humid environment from damaging the unit. Leaving none water stain on surface after rinse.



TROUBLESHOOTING

Problem	Reason	Solution
Lid does not open or close	• Sensor may be dirty • Manual reset needed • Batteries need replacement	• Clean sensor with a dry cloth • Press open/close button to reset unit • Replace with new batteries
Lid opens slowly	• Battery power is low	• Replace with new batteries

SPECIFICATIONS

Sensor waste bin VK-215

Bin capacity: 15 L

Battery requirements: 2 x AA batteries (not included)

Dimensions: 230 x 230 x 320 mm

Weight: 0,93 kg

In case of any problems with the device or doubts about the device or doubts related to its use, please contact your dealer or an authorized service center. Never try to repair the device yourself. The shredder has a factory seal, breaking which means the loss of warranty. Any attempt to repair it yourself will void the warranty.

In the event of a complaint, you will need to show proof of purchase for this device.

The correct disposal of electrical and electronic equipment:



The symbol on the products or the documentation accompanying them indicates that used electrical or electronic equipment must not be disposed of with other commercial wastes. The correct procedure is to transfer the used equipment to specialist collection points free of charge. In some countries, used equipment can be handed over to the dealer when you buy a different device. Proper handling of used equipment allows to save valuable resources and avoid negative impact on the environment and human health. Detailed information about the nearest collection points can be obtained from the dealer or local authorities. Incorrect disposal of waste is subject to penalties provided for in applicable regulations. The above symbol is valid only in EU countries; if it is necessary to dispose of used equipment outside of the EU, please contact your local dealer or local authorities for information about the proper course of action.

Manufactured in the PRC for Verotech Sp. z o.o. ul. Szyszkowa 35/37, 02-285 Warsaw, Poland